



### FNI Clutch Covers

1. Remove stock Clutch Cover.
2. Make sure the clutch is clean and threads are clean and free of threadlock. Make sure clutch shaft is free of retaining compound and is smooth and clean.
3. Install FNI Clutch Cover.
4. Torque clutch cover bolts, using a calibrated torque wrench, to 95 in-lbs. (If your torque wrench goes over 200 in-lbs it is too big and should not be used for this application.)

Please email [info@firenice.us](mailto:info@firenice.us) if there is any issue with your order.