

**Clutch Spring Shims** 

- 1. Remove Clutch Cover.
- 2. Install smaller shim on clutch spyder/bottom of spring and larger on top of spring/clutch cover.
- 3. Use more or less shims to fine tune RPM/Spring force as desired.
- 4. Torque clutch cover bolts, using a calibrated torque wrench, to <u>95 in-lbs</u>. (If your torque wrench goes over 200 in-lbs it is too big and should not be used for this application.)

<u>Please email info@firenice.us</u> if there is any issue with your order.