


FIRE-N-ICE

07-08SVP/M

- 1-Locate recess in stirrup panels located above footwells.**
- 2-Using pattern or aluminum outer trim ring, trace/mark cut line.**
- 3-Drill .500” holes in corners as indicated in photos.**
- 4-Using appropriate saw (jig saw, sawzall, etc.) cut center of stirrup out.**
***(cut should be on outside of line so trim ring will overlap to cover cut)**
- 5-Holding trim ring up to cutout insure that none of the cuts are seen, drill one .1875” (3/16”) hole, for alignment purposes. Put a pop rivet in, but don’t pull it. Once aligned, continue to drill remaining holes.**
- 6-Place steel screen behind trim ring, insert pop rivet thru trim ring and screen, place on previously drilled hole with backup washer in place and install. Continue with remaining rivets until vent is installed.**

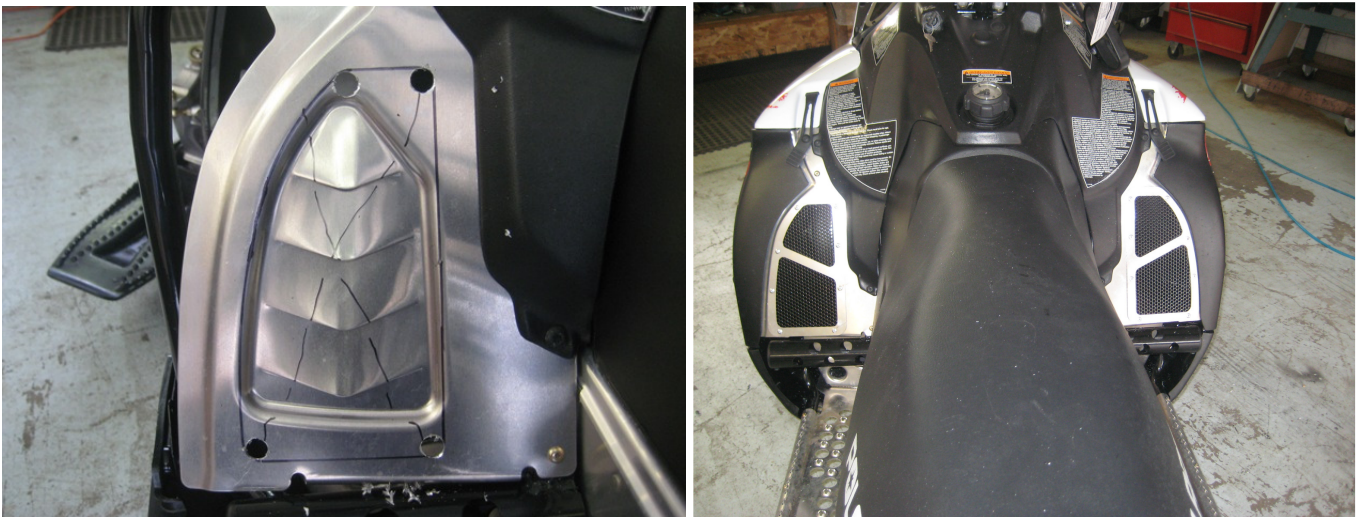

Thank You for using this Fire n Ice product!

Fire n Ice Performance Products, LLC
860 Cranmer Ave.
Idaho Falls, ID 83401
info@firenice.us
sales@firenice.us
firenice.us