

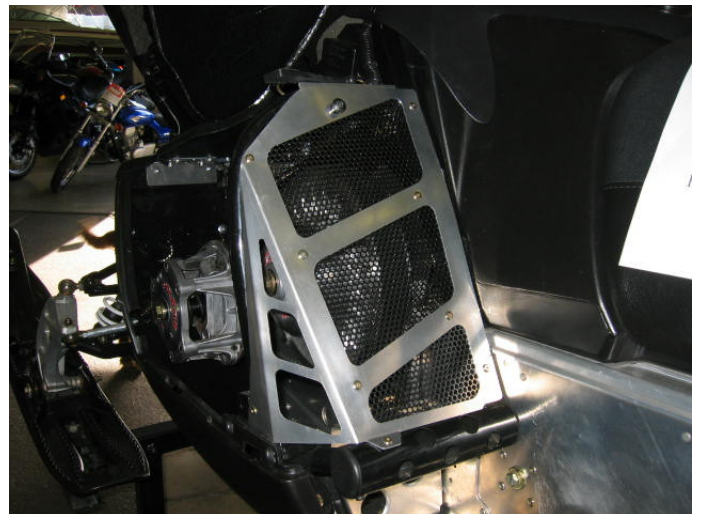
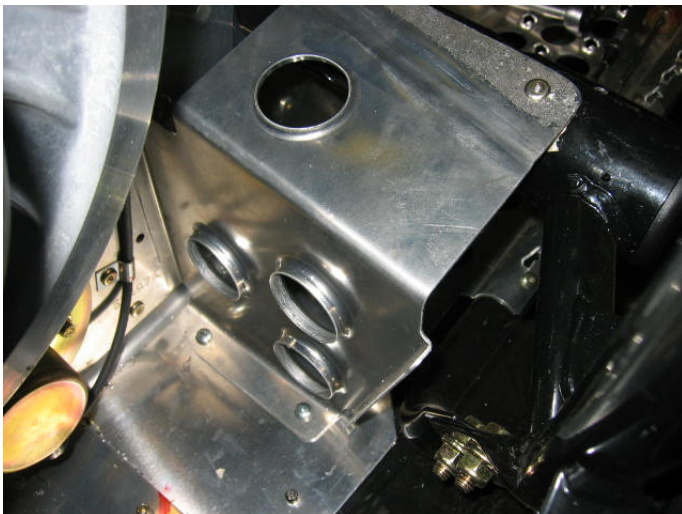


# FIRE★N★ICE

## 07SVP/MH

- 1-Remove stock close off panels. Cut toe stops from close off panel using supplied pattern. see pix
- 2-Re-shape PTO & MAG toe stops to be a 90 degree angle. (top must be flattened) see pix
- 3-Using 2 short steel pop rivets for round tube and 2 long steel pop rivets with bkup washers for running board, install both PTO & MAG toe stops to create completed foot well. see pix
- 4-Holding new Hi Flo Stirrup Vent to steering hoop, drill 3/16" holes thru un-used openings in vent into hoop. Use steel pop rivets to attach vents. see pix
- 5-Install 2 side panel pins in existing holes in side panel, using 1" LF pop rivets, nylon standoffs with backup washers. see pix
- 6-Drill steering hoop, then install 2 steering hoop pins using 1" LF pop rivets & nylon standoffs. Then place rubber strap on. This will hold side panels on. see pix
- 7-Using furniture bolt, standoff & washer bolt thru existing hole in new vent. This is for rubber hood hold down strap. see pix
- 8-Tape side panel cut pattern on. Mark and cut side panel for proper fit. see pix

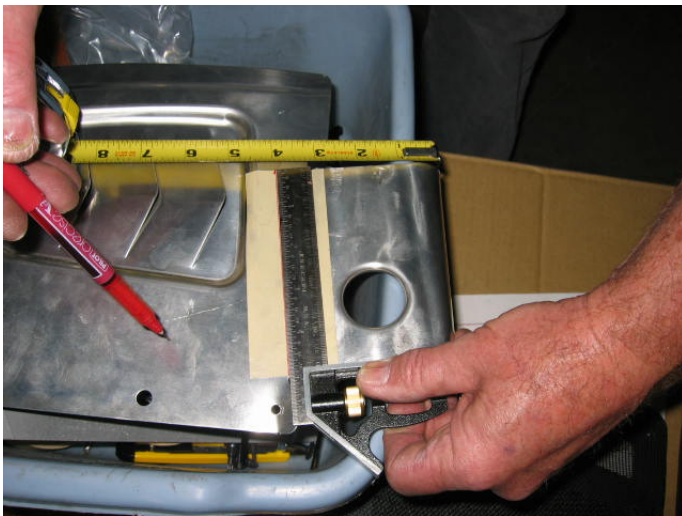

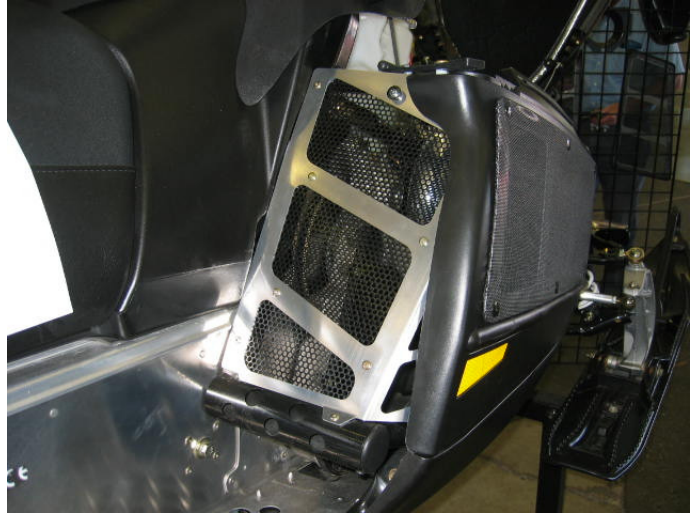

**Thank You for using this Fire n Ice product!**

**Fire n Ice Performance Products, LLC**  
**860 Cranmer Ave.**  
**Idaho Falls, ID 83401**  
[info@firenice.us](mailto:info@firenice.us)  
[sales@firenice.us](mailto:sales@firenice.us)  
[firenice.us](http://firenice.us)