





### Polaris Matryx Intake Protector

Tools:

- #20 (.161") drill bit.

#### **Protector Vents:**

1. Remove the stock intakes from the snowmobile.
2. Remove stock frogsinz vent material.
3. Apply a small bead of silicon or equivalent to the inside of the vent to ensure a complete seal.
4. Fit FNI intake vents up to the stock intake housing. Align the bottom left edge with the matching edge on the stock housing.
5. Drill and install the 2 front left push rivets first.
6. Next drill and install the 2 front right push rivets.
7. Then install the top flange push rivets, starting with the center.
8. Use pressure to ensure the flange is sitting flush to the stock housing when installing.
9. Reinstall the intake vent onto the snowmobile.

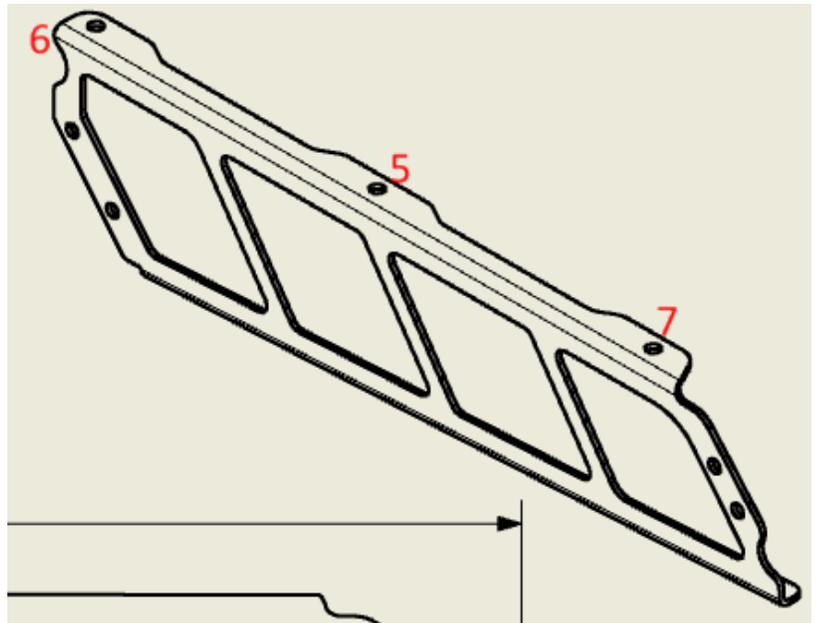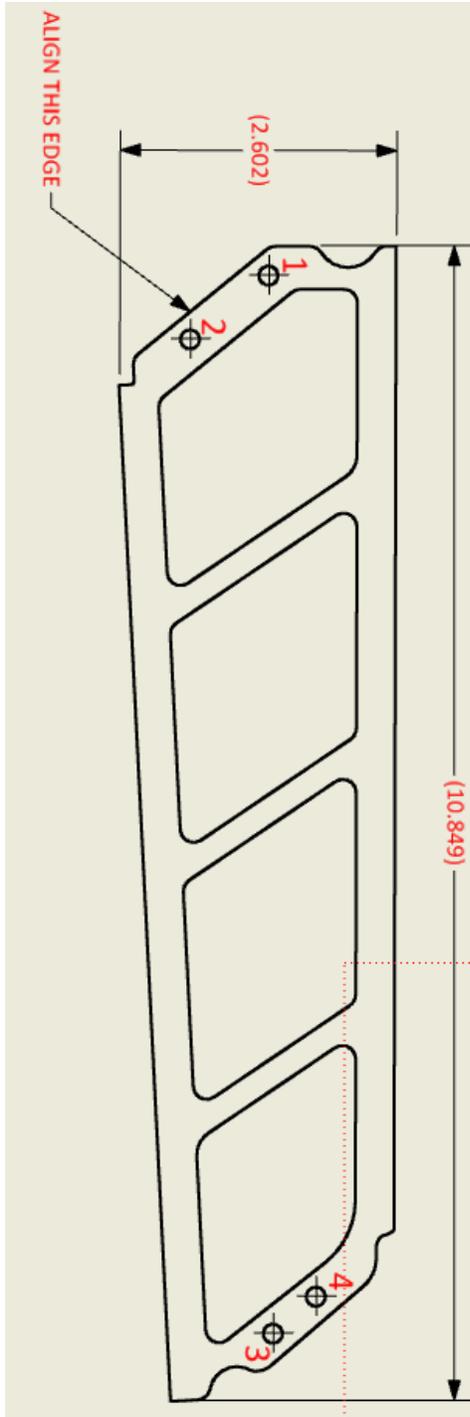

Please email [info@firenice.us](mailto:info@firenice.us) if there is any issue with your order.