



Generic Vent Install Guide

This guide will give you basic instructions for installing any Fire N Ice vent. There are many different ways to do it, so feel free to adjust these instructions to best fit your abilities and your tools.

1. Fit the vent up to its mounting location. Choose an edge that will help you align the vent again after removing it.
2. Mark around the outside of the vent using a pencil, marker, etc. Also mark the rivet locations. (Fig 1)
3. Offset and mark all of the edges by the thickness of the vent. (Fig 1)
4. Cut out the inside of the marked area using an oscillating cutter, or drill a number of holes with a hole saw.
5. Debur/clean up the cut edges.
6. Put the vent in place and drill and install the first rivet.
7. Work from one side to the other drilling and installing the rivets one hole at a time.
8. Optional: Apply a small bead of silicone to the back side of the vent to help seal.

Figure 1:



Figure 2:

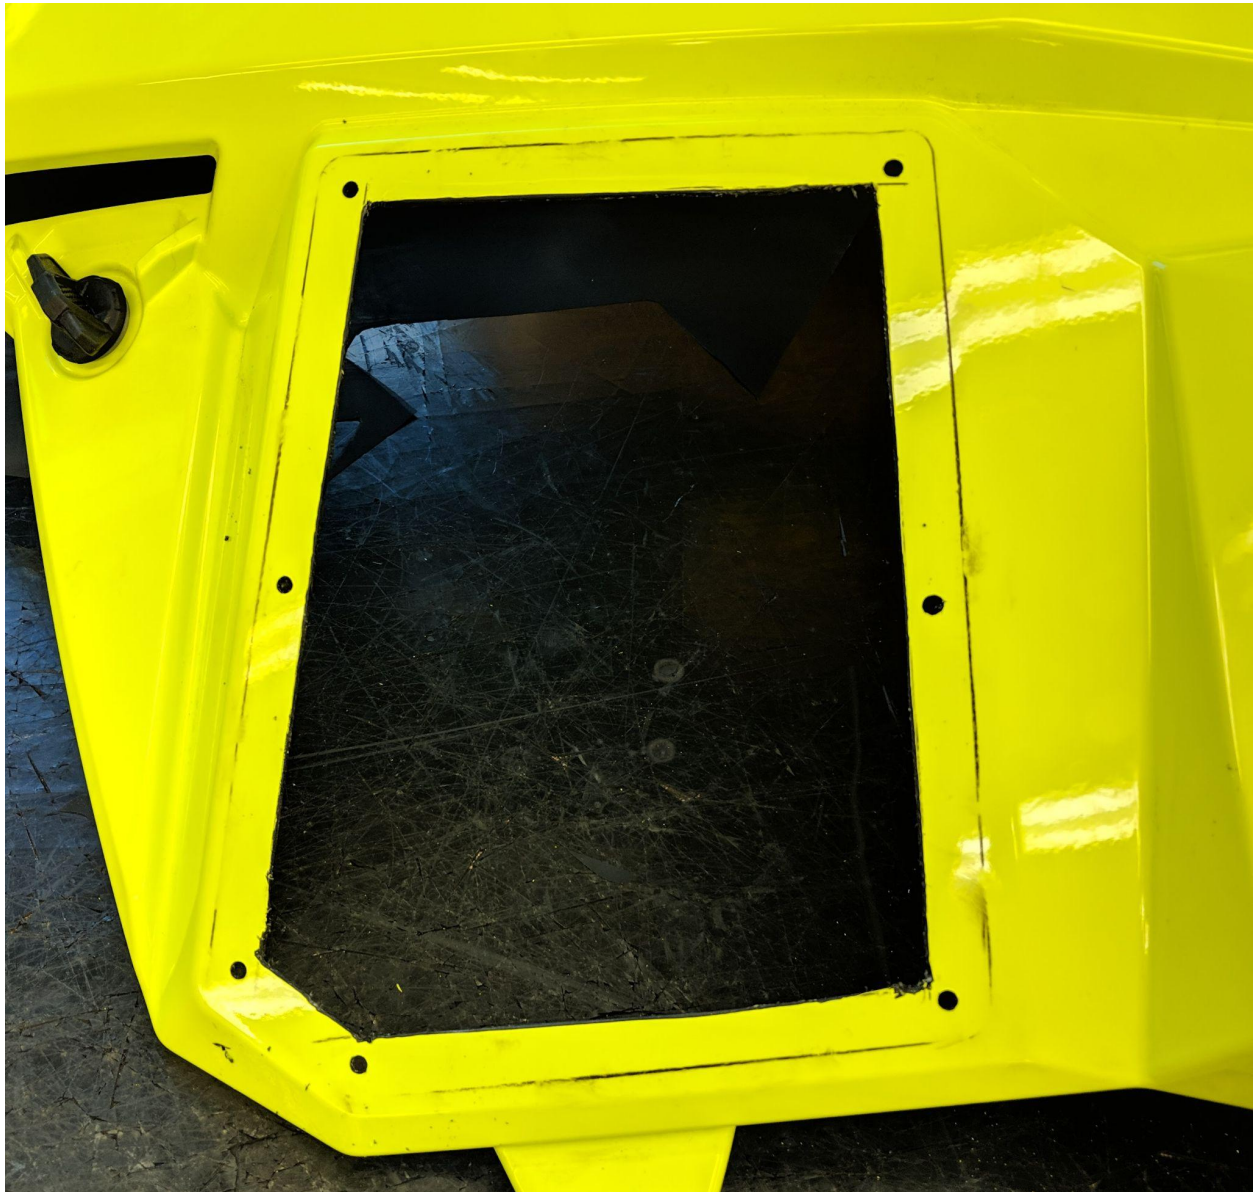


Figure 3



Please email info@firenice.us if there is any issue with your order.