



Tether Mount

1. Note the position of handlebars using the locating marks on the handlebars.
2. Remove handlebar mounting bolts (4).
3. Install tether into Fire N Ice Tether mount.
4. Place Fire N Ice Tether mount on the steering post base.
5. Reinstall handlebars and handlebar clamps. Tighten clamp evenly.
6. Reposition handlebars.
7. Torque mounting bolts to 14 ft-lb.

Figure 1:

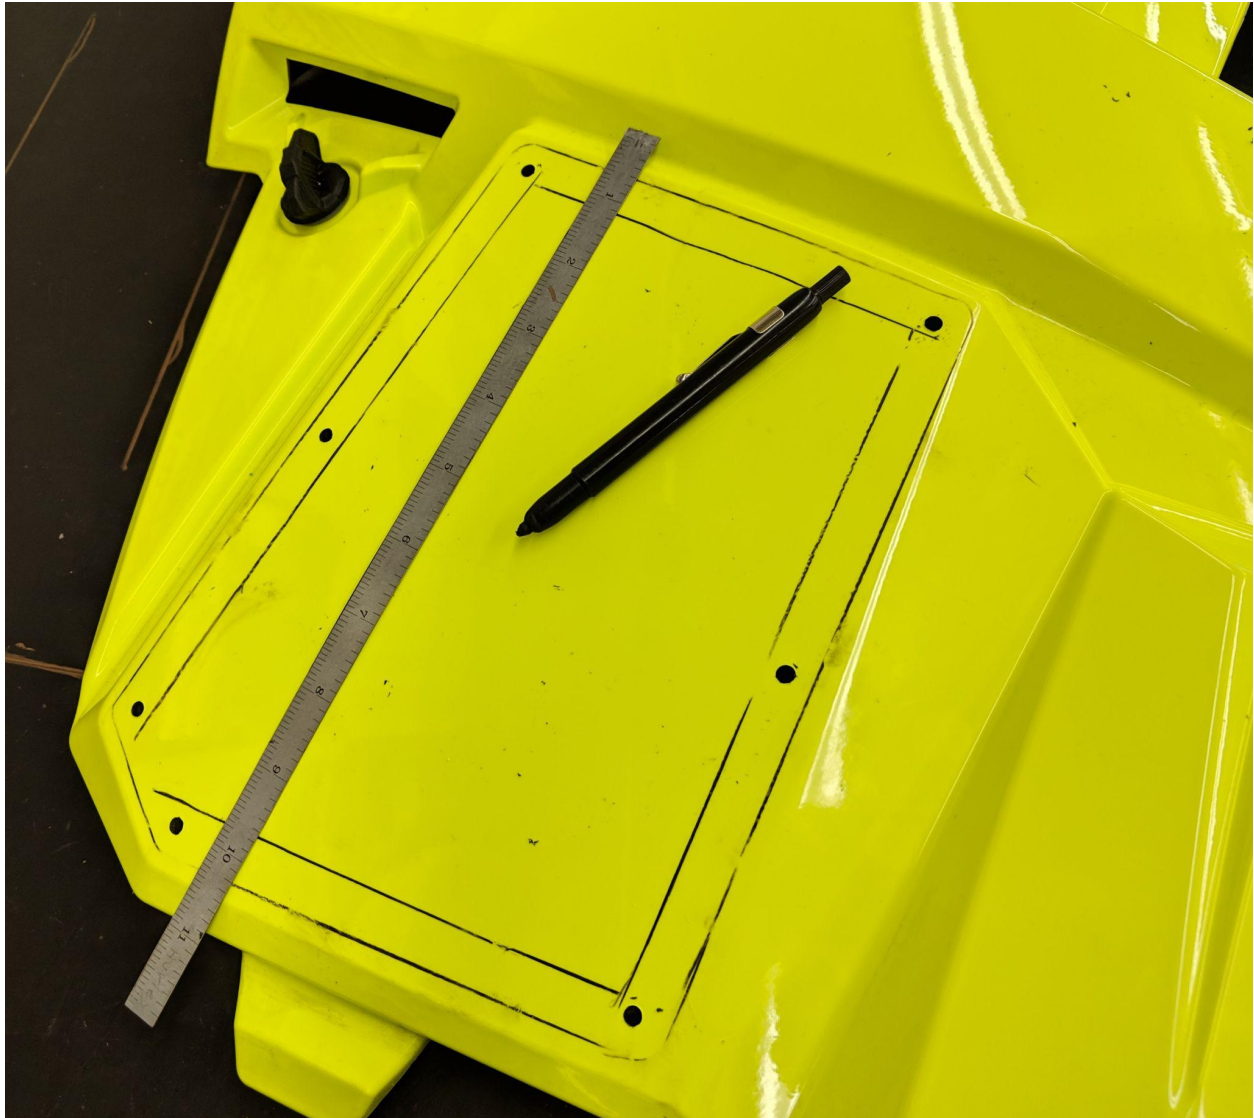


Figure 2:

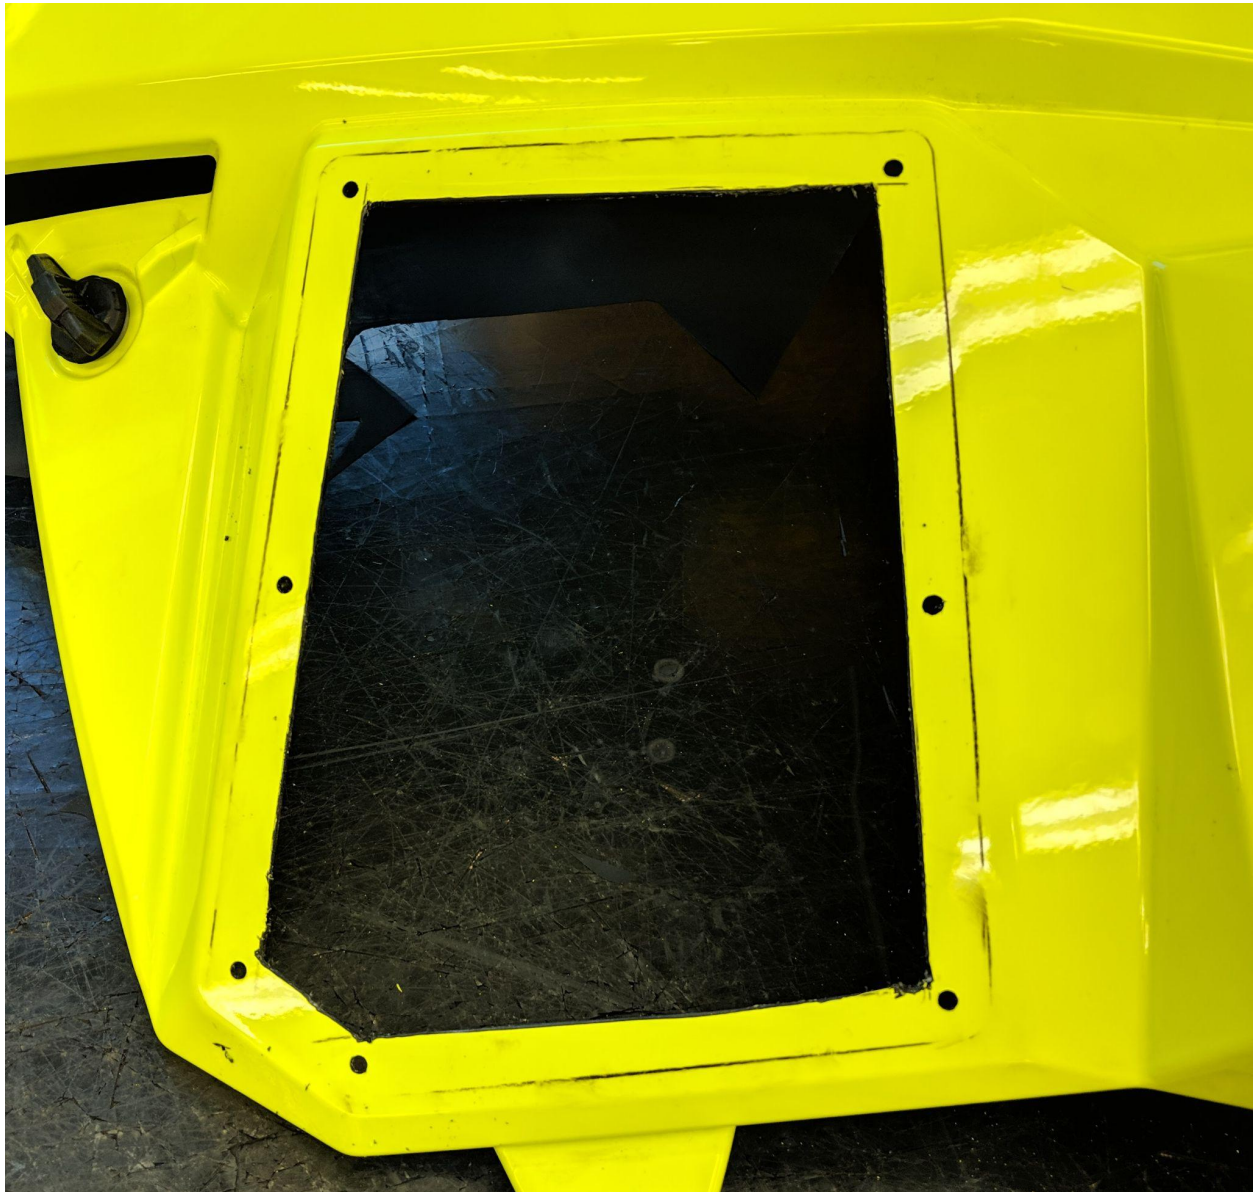


Figure 3



Please email info@firenice.us if there is any issue with your order.