




Polaris Matryx Big Air Intakes

Tools:

- #20 (.161") drill bit.
- E600 or silicone.

Protector Vents:

1. Remove the stock intakes from the snowmobile.
2. Remove stock frogsinz vent material.
3. Apply a small bead of silicone or equivalent to the inside of the vent and to the intake housing to ensure a complete seal.
4. Fit FNI intake vents up to the stock intake housing. Align the bottom left edge with the matching edge on the stock housing.
5. Drill and install the 2 front left push rivets first.
6. Next drill and install the 2 front right push rivets.
7. Then install the top flange push rivets, starting with the center.
8. Use pressure to ensure the flange is sitting flush to the stock housing when installing.
9. **Use additional silicone or equivalent to make sure the intake is completely sealed to the intake housing. Check the corners especially. If there are any gaps left, the intakes will suck snow inside the intakes which will freeze over. Snow will also make it into the motor. It is imperative that the frame is completely sealed.**
10. Reinstall the intake vent onto the snowmobile.

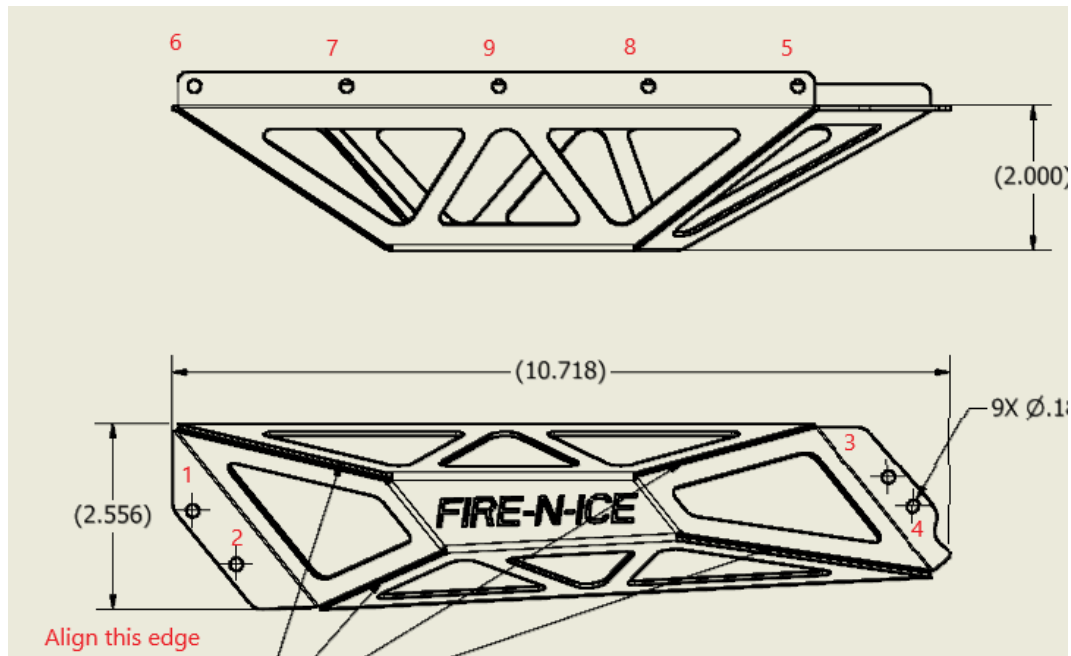



Please email info@firenice.us if there is any issue with your order.