




### **Ski Doo Lynx Gen 5 Intakes**

Tools:

- #31 (.122") drill bit.
- E600 or silicone.

#### **Protector Vents:**

1. Remove the stock intakes from the snowmobile.
2. Optional: Remove stock prefilter material.
3. Apply a small bead of silicone or equivalent to the bottom side of the Fire N Ice vent and to the intake housing to ensure a complete seal.
4. Fit FNI intake vents up to the stock intake housing. Align the top edges with the matching edge on the stock housing.
5. Drill and install the 2 top push rivets first.
6. Drill and install push rivets one at a time until all are installed.
7. Use pressure to ensure the flange is sitting flush with the stock housing when installing.
8. Reinstall the intake vent onto the snowmobile.
  - a. Note: Some clearance trimming on the intake plenum might be required when reinstalling the intake panels.

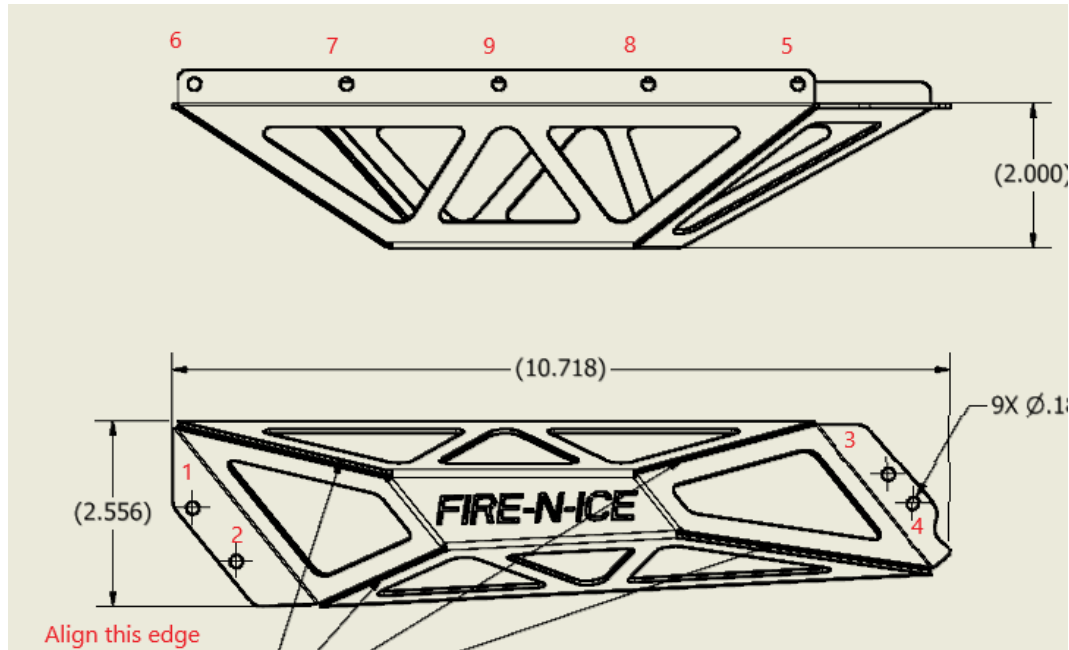

Please email [info@firenice.us](mailto:info@firenice.us) if there is any issue with your order.