





Gen 5 Airbox Boost Vent

1. Recommended to remove Hood and body panels to access the upper air intake mounted to the hood.
2. Use the provided template to mark cut location centered on the face.
3. Cut out, or drill out marked areas. Cut as shallow as possible to remove the needed plastic.
4. Recommended to remove the sound foam that will be exposed from the cut. Will be slightly louder, but will improve air flow and throttle response.
5. Clean out all debris from cutting in the intake.
6. Recommended: silicone or equivalent to the back side of the Fire N Ice Intake vent to ensure a seal around the vent.
7. Drill out one mounting hole at a time with #21 or 5/32 drill bit, install vent with provided push darts.
8. Reassemble hood and side panels.

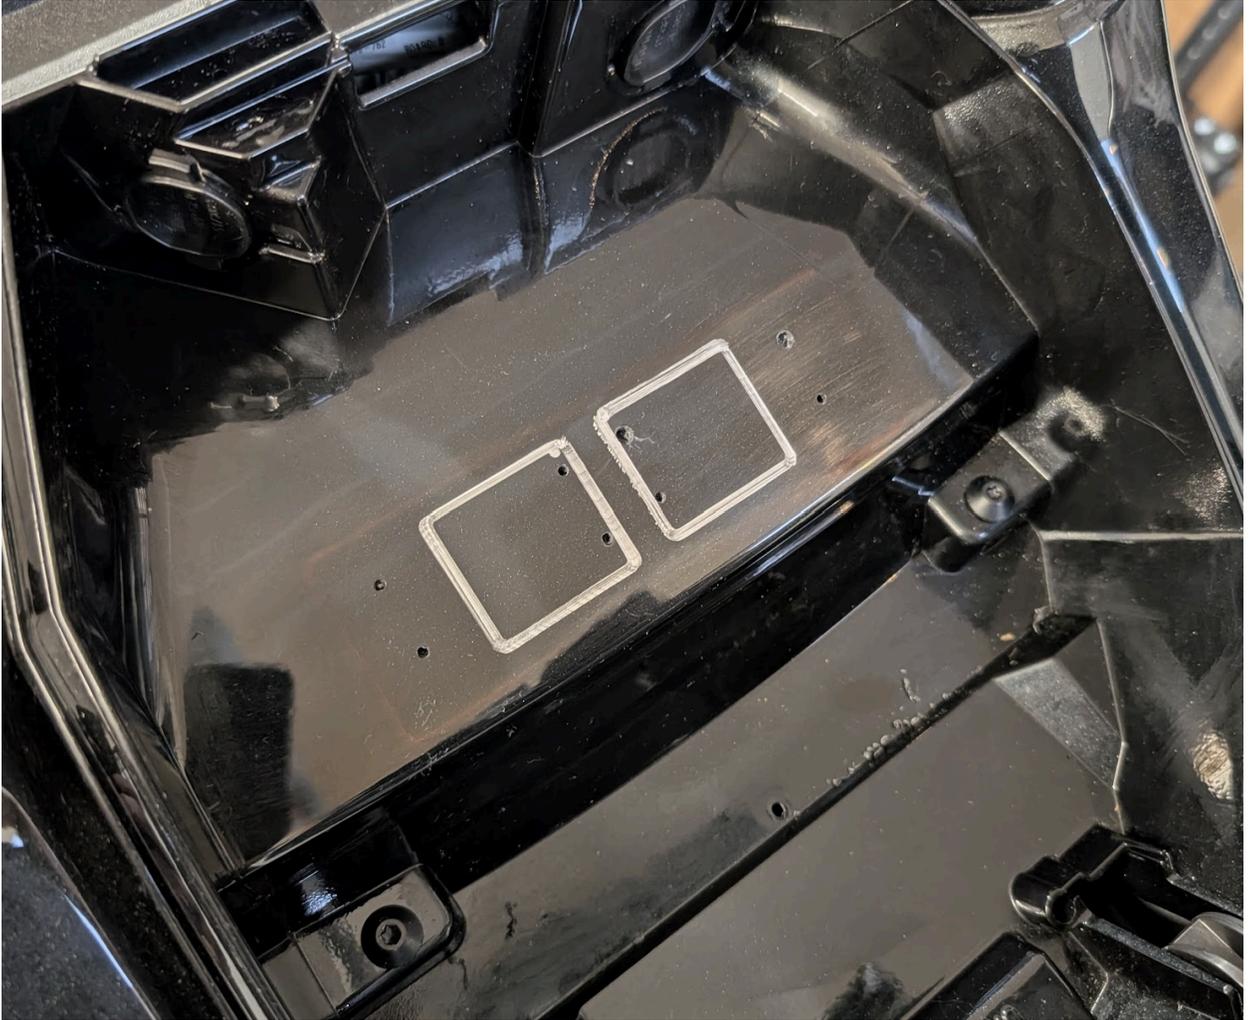

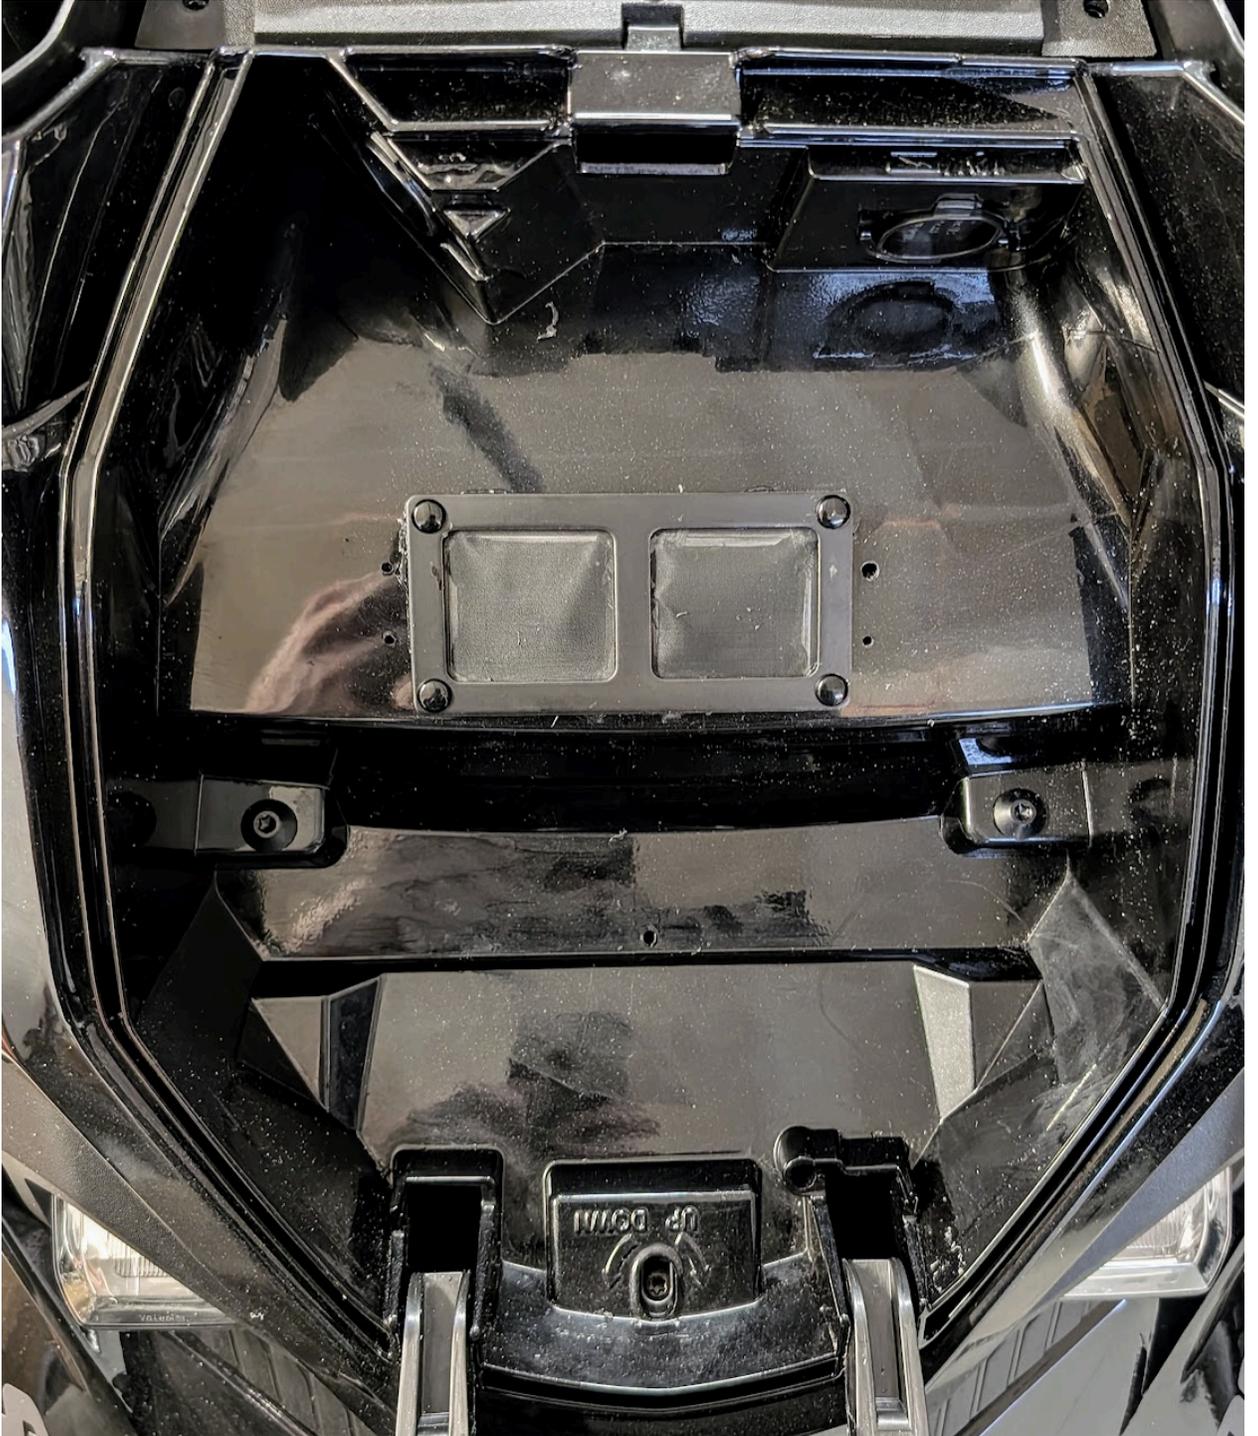

Please email info@firenice.us if there is any issue with your order.